

## Lighted Magnifier with Built-in Compass

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Lighted Magnifier has 3X magnifying power to let you view objects at three times their normal size and a light to let you see objects even in the dark. The built-in compass lets you find the direction almost anywhere.


### INSTALLING BATTERIES

Your magnifier's light is powered by two AAA batteries (not supplied). For the best performance and longest life, we recommend RadioShack alkaline batteries.

#### Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

1. Insert a screwdriver's tip or a coin under the lip of the cover and lift it off.

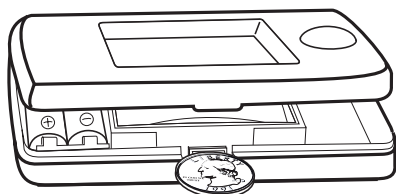

2. Insert 2 fresh AAA batteries as indicated by the polarity symbols (+ and -) marked inside the compartment. When the light dims, replace the batteries.

**Warning:** Dispose of old batteries promptly and properly. Do not burn or bury them.

**Caution:** If you do not plan to use the light for a week or more, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

### OPERATION


Place the magnifier over the objects you want to magnify and look through the convex lens.

To turn on the light, slide the switch on the bottom of the magnifier to the right. To turn off the light, slide the switch to the left.

To use the compass, place the magnifier on a flat, level surface away from any magnetic objects.

### REPLACING THE LIGHT BULB

1. Remove the magnifier's cover.

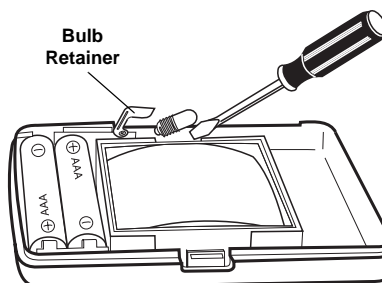

2. Insert a flat bladed screwdriver in the slot in the bulb retainer and rotate the retainer away from the magnifying lens.
3. Gently pry out the old bulb and replace it with a new 2.2V 0.25A E5-base bulb.

4. Replace the retainer and the cover.

and wipe it with a damp cloth occasionally to keep it looking new.

## CARE

Keep the magnifier dry; if it gets wet, wipe it dry immediately. Use and store the magnifier only in normal temperature environments. Handle the magnifier carefully; do not drop it. Keep the magnifier away from dust and dirt,

Modifying or tampering with the magnifier's internal components can cause a malfunction and might invalidate its warranty. If your magnifier is not performing as it should, take it to your local RadioShack store for assistance.

## SPECIFICATIONS

Power Source .....	3V with Two AAA Batteries
Battery Life .....	1 Hour and 41 Minutes (continuously)
Bulb Life .....	6 Hours (continuously)
Accuracy .....	$\pm 5^\circ$
Dimensions (HWD) .....	$2\frac{3}{16} \times 3\frac{3}{4} \times 1\frac{1}{16}$ Inches (56 $\times$ 95 $\times$ 18 mm)
Weight (with Batteries) .....	2.3 oz (66 g)
Accessory .....	1 Soft-sided Case

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

### Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

*We Service What We Sell*

12/99

RadioShack Corporation  
Fort Worth, Texas 76102

63-1112  
09A00  
Printed in China